


Installation Instructions JLT Next Generation Cold Air Intake Kit for 1996-2004 Mustang GT #CA12-FMG-9604; #CA12-FMG-9604-P

Thank you for purchasing our product. We hope you are satisfied with the look and performance.

Please review complete instructions prior to installing.

Step	
<u>#</u> 1	Verify you have all of the following parts included in the kit: (1) JLT tube w/ PCV fitting and IAC fitting, (1) 3-3.5" Silicone Reducer, (1) 4.5-4" Silicone Reducer, (1) Apron Plate (1) Billet MAF Adaptor with bolts, (1) MAF Gasket, (1) MAF spacer, (1) 4x6" Air Filter, (1) Small Section of 5/8" hose for PCV, (2) #56 Clamps, (1) #72 Clamp, (1) #64 Clamp and (1) Grommet for use only with 96-01 models with IAT
2	Gather all of the following tools needed for the installation: 5/16 Nut Driver, 10mm Open End Wrench, 11mm Open End Wrench, Phillips Head Screwdriver, Car Jack and Jack Stands. You may also need a Panel or Spade Drill bit or a Dremel tool (see# 6)
3	Remove your stock intake system from the throttle body to the filter housing.
4	Unbolt your Mass Air Flow Sensor from the filter housing, and install the MAF filter adaptor using the supplied MAF gasket and bolts shown below. Do not reuse the screen BOLTS GO THROUGH MAF AND THREAD INTO ADAPTOR .
	STOCK MAF RUBBER GASKET IN BETWEEN
	BOLT MAF ADAPTOR
5	Install the filter onto the MAF adaptor and the silicone spacer & reducer onto the MAF as shown:
	SPACER BOES ON
Page 1 of	MAF

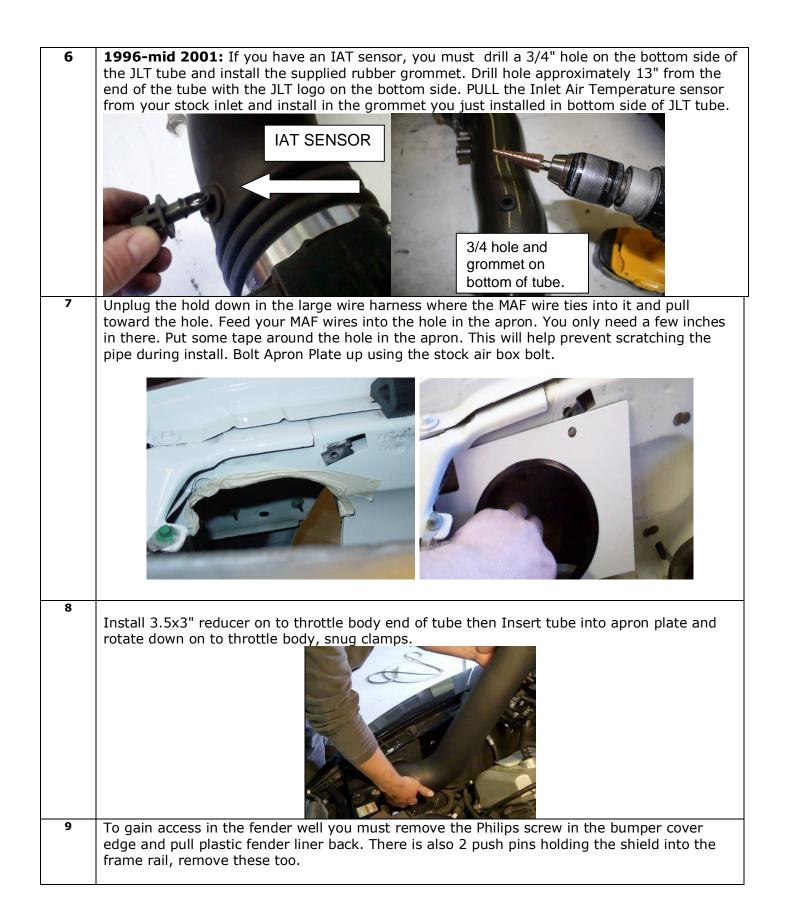

10	Raise the REDUCER/MAF/FILTER assembly up onto the JLT tube. Point MAF top toward the rear of the car and the plug will point toward the driver's fender. By TWISTING the tube at the throttle body you can gain more room right or left. Plug in the MAF and tighten the clamps. CLAMPS ONLY NEED TO BE LIGHTLY SNUG
11	Put the splash shield back in and reinstall the push pins and screw.
12	Up top, snug up the clamp at the throttle body. CLAMPS ONLY NEED TO BE LIGHTLY SNUG
13	Use supplied 5/8" hose to connect to PCV hose and also connect the factory IAC hose at this time.
14	

This kit includes an S&B Powerstack pre-oiled reusable air filter. The frequency you should clean your filter will depend on your driving conditions. It is recommended to check your filter at every oil change or 3,000 miles. If there is a build up of dirt as thick as the wire mesh, then it's time to clean your filter. As dirt builds up on your filter, the restriction of the airflow also increases. More frequent cleanings will improve your fuel economy and your vehicle's performance.

To properly clean your filter, we recommend the S&B Precision Cleaning & Oiling Kit (located in the Parts Sold Separately Section of our website, www.JLTtruecoldair.com).

Thanks for the business. If you have any questions, please e-mail <u>lay@lLTtruecoldair.com</u> or call 757-335-1940. Our hours are 8:00am – 5:00pm Eastern Time, Monday-Friday.

disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products. <u>Custom Paint Disclaimer</u>: All custom paint jobs are done by JLT Performance Inc. Every job is different and done by hand. By ordering a custom paint job, you accept this fact and cannot hold JLT Performance liable for the end result not being exactly what you had in your mind.

Warranty: JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Air Filters will not be accepted for return unless they are in original plastic sealed bag. Please visit www.JLTtruecoldair.com for complete return policy.