






Scan QR Code with your smart phone for video instructions. Video can also be viewed on our website. See product details.

**Installation Instructions #JLTOSP-FL9904 JLT Oil Separator
(1999-2004 Lightning; 2002-03 F150 Harley Davidson Passenger Side)**

Please review complete instructions prior to installing.

Step#	
1	<p>Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) Angled Mounting Bracket, (2) Fine thread machine screws, (2) Course mounting screws, (2) 3/8 hoses, (1) 1/4" extension fitting</p>
2	<p>Gather all of the following tools needed for the installation: Drill with small bit, Phillips screw driver, hose cutters, tape measure</p>
3	<p>Choose a mounting location for the separator. We recommend mounting it on the plastic cowl panel directly above the PCV connection. It must be mounted low enough so it doesn't come in contact with the hood and in a location where you can still unscrew the can and remove it.</p> <p>Here is where we recommend:</p>  <p>Drill 2 holes smaller than the mounting screws and attach the mount with the supplied screws</p>
4	<p>Disconnect the PCV line as shown:</p> 
5	<p>Use the 2 supplied fine thread screws to attach the oil separator to the mounting bracket. Mount Separator to bracket with the filter on the right side when looking at it. See next picture.</p>

Use the shorter supplied hose to connect the hard PCV line from the valve cover to the fitting on the RIGHT side of the separator (FILTER SIDE) and use the longer supplied hose to connect the LEFT side fitting to the rubber connection on the engine.

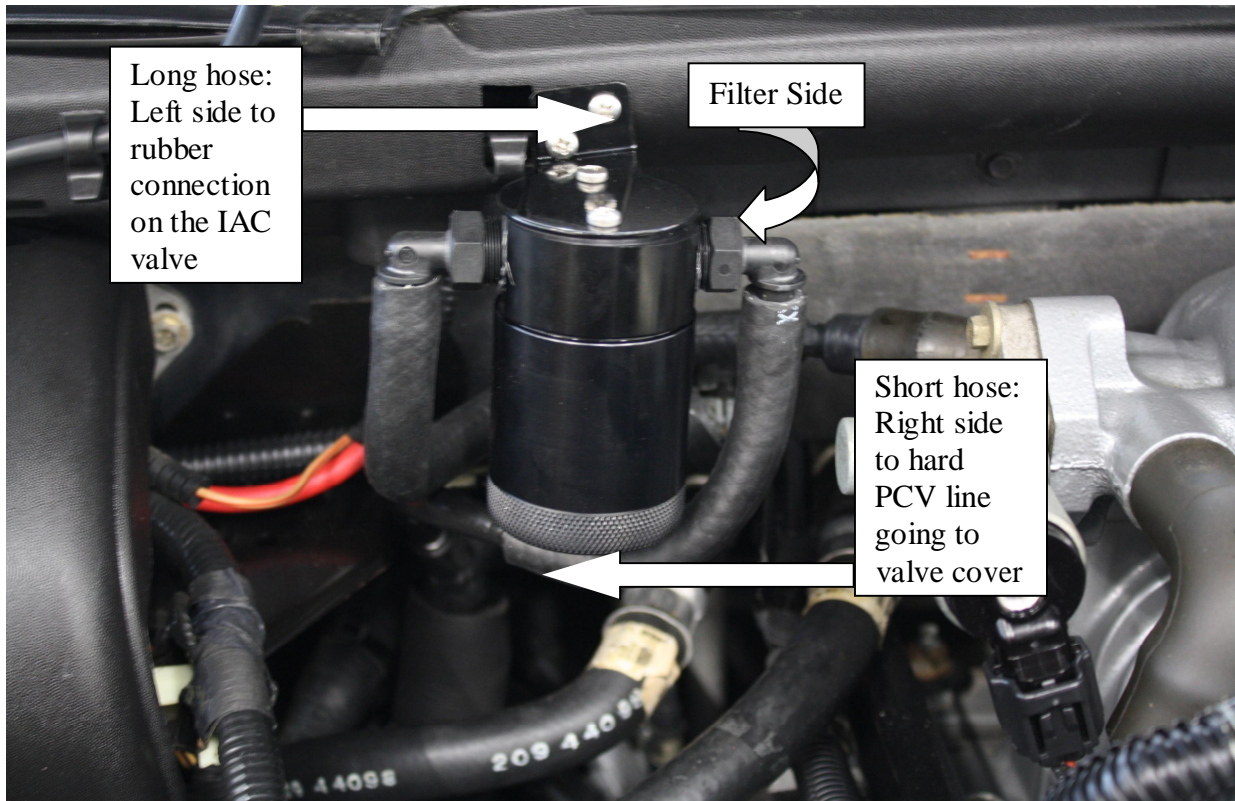

To properly clean the filter in the oil separator, remove it with a pick or small screw driver and spray any degreaser or solvent through it and let it air dry. Clean it every 5,000 miles. Thanks for the business. If you have any questions, please e-mail Jay@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

Warranty: JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLTtruecoldair.com for complete return policy.