
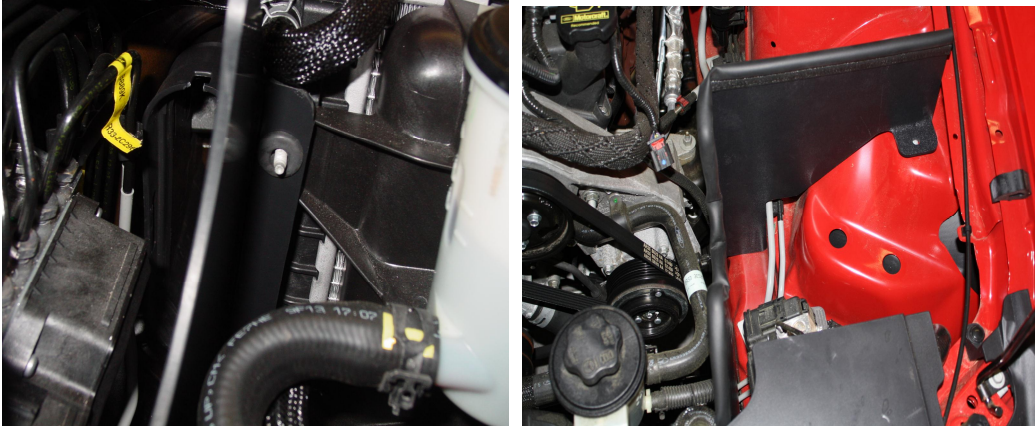





Installation Instructions
JLT Series 2 Cold Air Intake for 2010 Mustang V6
#CAI2-FMV6-10; #CAI2-FMV6-10-P

Thank you for purchasing our product. We hope you are satisfied with the look and performance. You may use any polish or wax on the painted tubes or Back to Black on the textured plastic tubes. It is also recommended to use some tire shine on the rubber elbow. Take your time and it will be a smooth install.

ATTENTION: A tune specific for this intake is required when installing this kit. Failure to add a tune specific for the JLT intake may result in major engine damage.
*****DO NOT INSTALL KIT AND DRIVE WITHOUT A TUNE!*****

Please review complete instructions prior to installing.

Step#	
1	<p>Verify you have all of the following parts included in the kit: (1) JLT Intake tube with PCV grommet, (1) 3.5-3" ID 90 degree Rubber Elbow, (1) MAF Wire harness extension, (1) JLT Heat Shield, (1) 3.5x8" Air Filter, (2) MAF screws, (1) 56 Clamps, (1) 64 Clamp, (1) PCV Hose, If package was purchased: SCT Tuner</p>
2	<p>Gather all of the following tools needed for the installation: 5/16 Nut Driver, 10mm Socket and Ratchet, #20 Torx Driver, and Phillips Head Screwdriver</p>
3	<p>Install Tune for JLT Intake – Refer to instructions included with the Tuner. Make sure the tune is for the new Series 2 JLT Intake and not the original JLT.</p>
4	<p>Remove 10mm bolt holding down the airbox, loosen the clamp at the throttle body, unplug the MAF sensor, PCV line at the back of the valve cover and remove the stock intake.</p> <div style="text-align: center;">  <p>The diagram shows a top-down view of the engine bay. A grey intake tube is being installed. A white box labeled 'CLAMP' points to a clamp on the tube. A white box labeled 'PCV HOSE' points to a hose connected to the tube. A white box labeled 'MAF PLUG' points to a plug on the tube. A white box labeled 'BOLT' points to a bolt on the engine block.</p> </div>
5	<p>Slide heat shield on to the stud on the fan shroud and bolt down using stock air box bolt.</p> <div style="text-align: center;">  <p>The left photo shows a close-up of a black heat shield being slid onto a metal stud on a fan shroud. The right photo shows the heat shield being bolted down to the engine block.</p> </div>
6	<p>Using a T-20 Torq driver remove the MAF sensor from the stock box and install in the JLT tube using the supplied screws.</p> <div style="text-align: center;">  <p>The photo shows a close-up of the MAF sensor being inserted into the JLT intake tube. Two screws are visible, securing the sensor in place.</p> </div>

7	Install the larger end of the rubber elbow on to the JLT tube and with the clamps loose, put one end into the hole in the heat shield and slide the rubber elbow onto the throttle body and tighten the clamp.
8	Sliding the tube into the rubber elbow will aid the install of the filter, now put the air filter onto the JLT tube.
9	Install the supplied PVC hose onto the fitting on the back of the valve cover and insert the fitting end into the grommet in the JLT tube. It will fit tight onto the fitting on the valve cover so it will not come off while driving. Push straight down. 
10	Plug MAF harness extension into factory plug and the other end on the MAF sensor 
11	Go back and check all connections and lightly snug the clamps. DO NOT OVER TIGHTEN THE CLAMPS



This kit includes an S&B Powerstack pre-oiled reusable air filter. The frequency you should clean your filter will depend on your driving conditions. It is recommended to check your filter at every oil change or 3,000 miles. If there is a build up of dirt as thick as the wire mesh, then it's time to clean your filter. As dirt builds up on your filter, the restriction of the airflow also increases. More frequent cleanings will improve your fuel economy and your vehicle's performance.

To properly clean your filter, we recommend the S&B Precision Cleaning & Oiling Kit (located in the Parts Sold Separately Section of our website, www.JLTtruecoldair.com).

Thanks for the business. If you have any **JLT intake questions**, please e-mail Jay@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

For all SCT tuning questions, contact SCT tech at support@sctflash.com or call 407.774.2447.

Warranty: JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

Custom Paint Disclaimer: All custom paint jobs are done by JLT Performance Inc. Every job is different and done by hand. By ordering a custom paint job, you accept this fact and cannot hold JLT Performance liable for the end result not being exactly what you had in your mind.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Air Filters will not be accepted for return unless they are in original plastic sealed bag. Please visit www.JLTtruecoldair.com for complete return policy.