


# Installation Instructions

**2007 Shelby GT500, 3" off-road mid-pipe kit**  
Connects Bassani long-tube GT500 headers to Bassani 3" GT500 aft-cat system.

**5407R2**



**Please check Parts List below  
to insure that all parts  
are included in the product box !**

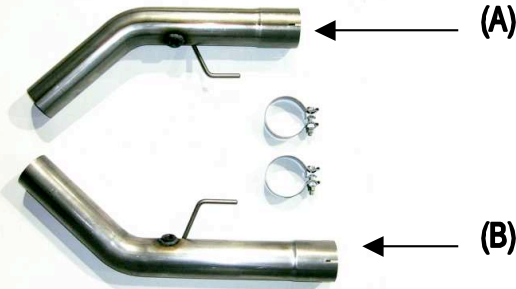

**Note: anti-seize  
should be applied  
to all fastener  
threads, pipe slip  
joints and mating  
surfaces of  
ball /socket  
connections.**

**Parts List and Description**

**Hardware List**

(A)	PN	5407R2D –mid-pipe (driver side)	2	-3" band clamps
(B)	PN	5407R2P -mid-pipe (passenger side)	1	-anti seize compound

**Installation instructions:**

- 1.) To begin this install, it is assumed that you have already installed Bassani long-tube GT500 headers as per their included instructions.
- 2.) Identify left and right mid-pipes for proper assembly; the longer pipe is to be installed on the passenger side header.
- 3.) Place supplied clamps over inlets of mid-pipes so that fasteners will be inside of pipes and facing down when installed.
- 4.) As this mid-pipe kit is designed to be installed with and at the same time as a Bassani 3" X-crossover/aft-cat system for GT500's, proceed at this time with instructions included with the 3" crossover/aft-cat system.

**FOR TECHNICAL ASSISTANCE CALL TOLL-FREE (866) 782-3283**  
**2900 East La Jolla Anaheim, CA 92806**