


Installation Instructions

2007 Shelby GT500, 3" metallic converter/mid-pipe kit
Connects Bassani long-tube GT500 headers to Bassani 3" GT500 aft-cat system.

5407R3



**Please check Parts List below
to insure that all parts
are included in the product box !**

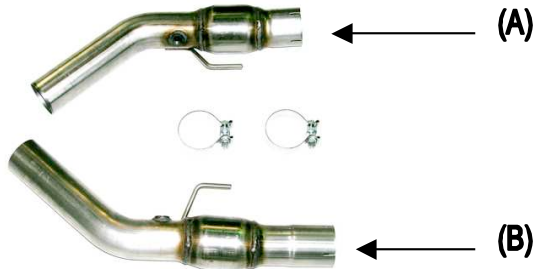

**Note: anti-seize
should be applied
to all fastener
threads, pipe slip
joints and mating
surfaces of
ball /socket
connections.**

Parts List and Description

Hardware List

(A)	PN	5407R3D -converter/mid-pipe (driver side)	2	-3" band clamps
(B)	PN	5407R3P -converter/mid-pipe (passenger side)	1	-anti seize compound

Installation instructions:

- 1.) To begin this install, it is assumed that you have already installed Bassani long-tube GT500 headers as per their included instructions.
- 2.) Identify left and right pipes for proper assembly; the longer pipe is to be installed on the passenger side header.
- 3.) Place supplied clamps over inlets of mid-pipes so that fasteners will be inside of pipes and facing down when installed.
- 4.) As this mid-pipe kit is designed to be installed with and at the same time as a Bassani 3" X-crossover/aft-cat system for GT500's, proceed at this time with instructions included with the 3" crossover/aft-cat system.

FOR TECHNICAL ASSISTANCE CALL TOLL-FREE (866) 782-3283
2900 East La Jolla Anaheim, CA 92806