



**2013 RTR Rear Applique with "RTR" Graphic
CDC# 1398-7006-01**



About the Product: The RTR Rear Appliqué is a powder coated stamped steel part.

Components:

- 1 - RTR Appliqué (with 3M Bonding Tape preinstalled)
- 1 – Adhesion Promoter Pack
- 2 – Alcohol Packs
- 1 – Rust Inhibitor Pack
- 3 – Strips of Black Vinyl
- 1 – Installation Guide

Tools Required:

- Philips Screw Driver
- Plastic Panel Tool
- Protective blanket
- Scissors/Razor Blade
- (Option 1) Air Body Saw
- (Option 1) Drill Motor with ¼" Drill
- (Option 2) Drill Motor
- (Option 2) 5" Bi-metal Hole Saw

CD4II3DF

Installation Procedure:

1. With Deck lid open, remove the (2) Philips screws that secure the lower corners of the factory trim panel. (Screws will not be reused.)



2. Remove factory panel. Use a flat panel tool, preferably plastic to release the clips from back side of the factory panel. The second image shows a close up of the clips.



3. (OPTION 1) Remove the "Bump". **Note:** A few different methods may be used for this step. Use method that you feel most comfortable with. First method below: Place protective blanket to catch metal shavings. Drill a starter hole (1/4" Drill) and cut with an Air Body Saw. **Caution: Do NOT cut through the inside layer of Sheet Metal.**



CD4II3DF

4. Remove and discard "Bump". Remove any burrs. **Important:** Apply the supplied Rust/corrosion inhibitor to the cut edges.



5. (Option 2) Use a 5" Hole Saw to remove the "Bump" **Important:** Apply the supplied Rust/corrosion inhibitor to the cut edges. **Caution: Do NOT cut through the inside layer of Sheet Metal.**




6. Clean the perimeter of the Deck lid with the provided Alcohol Packs and allow to dry.



CD4II3DF

7. Apply the provided "Black Out" vinyl strips along the bottom and sides. Cut to length.

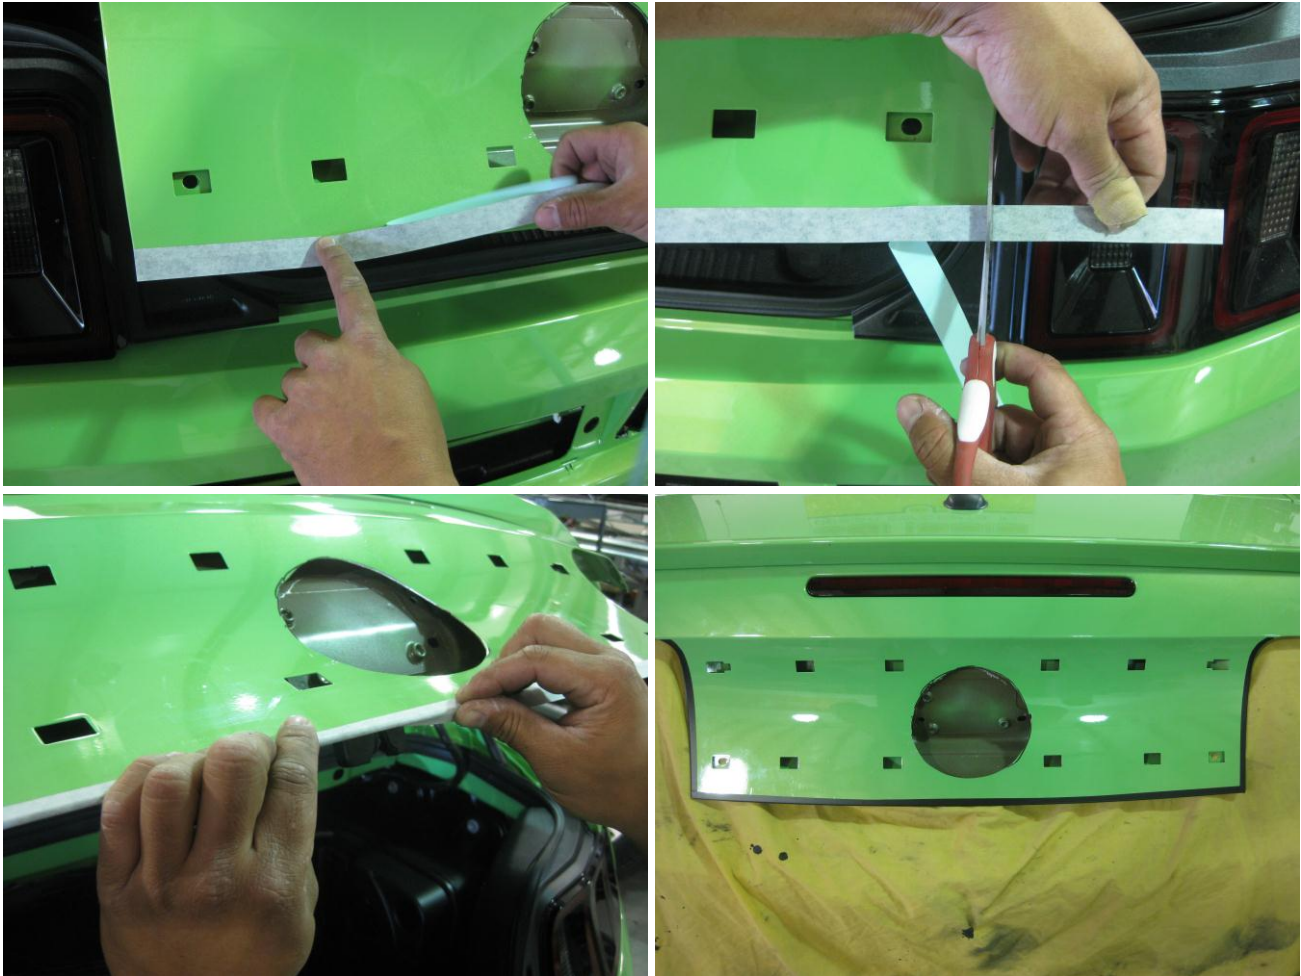

8. Apply adhesion promoter to the bonding area. **Caution: Do not apply Adhesion Promoter above bonding area; it will leave a visible residue. Excess can be cleaned with wax and grease remover if needed.**



CD4II3DF

9. Install the RTR Applique. Peel the red backing of the 3M tape to create "pull tabs". Align with Decklid, press corners to hold in place, completely



Thank you for choosing **Classic Design Concepts** for your restyling needs. If you have any questions or concerns regarding installation please contact Tech@classicdesignconcepts.com or call 866-624-7997.