



**2015 Outlaw Rockers (All Models)  
CDC# 1511-7011-01**

**NOTE:** This product is Injection Molded UV stable TPO. Rockers may be installed “as is” if you prefer, but we suggest painting them to match the car. We **HIGHLY** recommend a Professional Automotive Paint Facility. Standard Fascia paint processes should be used. **Read and follow the installation Instructions thoroughly, CDC will not warranty improperly installed parts.**



**Components:**

- 1 - Outlaw Driver Side Rocker
- 1 – Outlaw Passenger Side Rocker
- 1 – Driver Side Winglet
- 1 – Passenger Side Winglet
- 26 – 3/16 Aluminum Rivets
- 22 – Rocker Clips
- 36” x 1/2” 3M VHB 2 sided tape
- 2 – Adhesion Promoter
- 2 - Alcohol Pack

**CDC Part#**

- 1511-2401-01
- 1511-2402-01
- 1511-2405-01
- 1511-2406-01
- 75001
- 85005
- 950032
- 950007
- 950006

**Tools Required:**

- Razor Blade • Side Cutters or similar •Jig saw or similar •Dill Motor
- Panel Tool • T-27 Torx Bit and driver •3/16” Drill •Rivet Gun •Soldering Gun

**Installation Procedure:**

1. If you choose to paint your Outlaw Rockers, apply masking tape to the back side of the Winglets to avoid overspray. The 3M VHB tape that will hold the Winglets to the Rockers performs optimally to clean plastic. Refer to image below. If you choose not to paint, continue to step #2.



2. Assemble the Winglets to the Outlaw Rockers. **Note:** The Winglets are separate to make the painting process easier. The parts are pre-taped with 3M VHB tape. Remove the Masking tape from the back side of the Winglets, clean with the area with the supplied Alcohol Pack, and allow to dry. Apply the supplied Adhesion Promoter and allow to dry. Peel the red backing from the tape, use the alignment pins to locate the parts, and press the parts together firmly.








# CD4II3DM

3. Melt the 3 locator pins at the top of the Rockers with a soldering iron or similar as shown below.



4. Remove the push pin retainer located at the rear of the Rocker. Remove (2) push pin retainers located at the front of the Rocker. Remove the (8) push pin retainers from the bottom of the Rocker. **NOTE:** Keep the factory retainers as they will be reused. Use a Panel Tool similar to picture below.

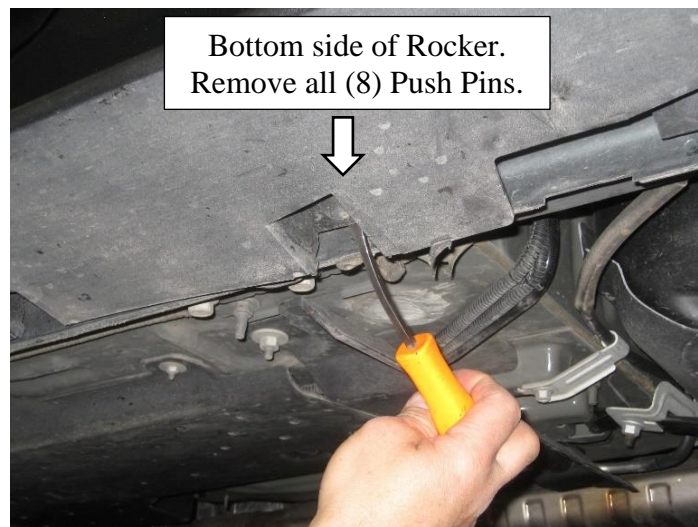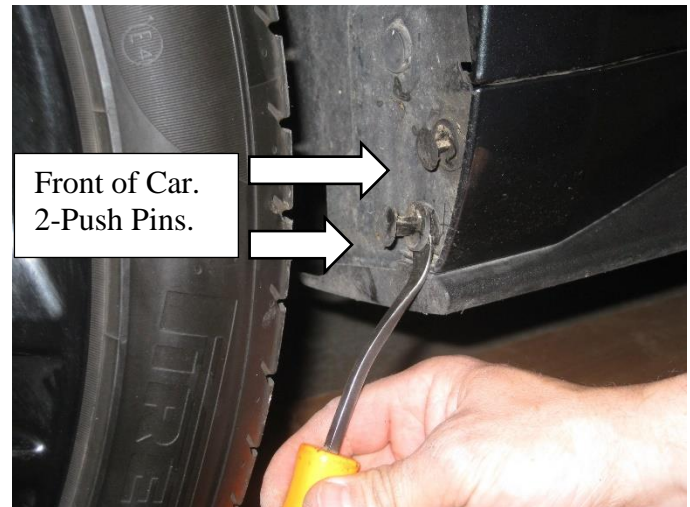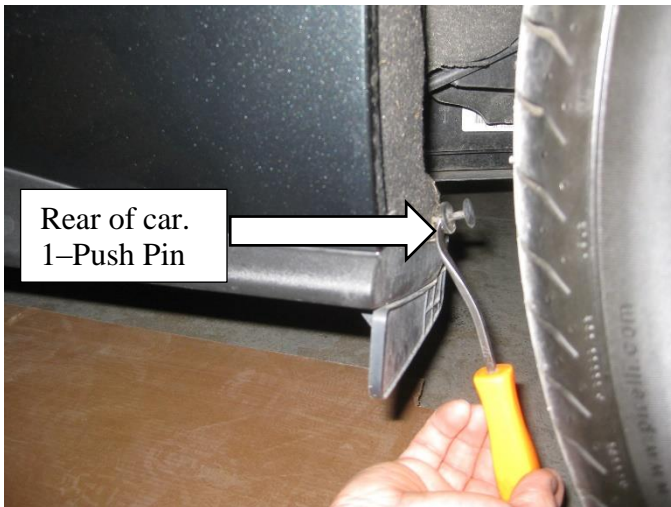

## CD4II3DM

5. Starting at the rear, pull the Rocker away from the vehicle to gain access to the Rocker Clips that secure the top edge of the rocker to the body. Use a Panel Tool to help disengage the clips. You will inevitably break some clips, but don't worry we have included new clips to install your CDC Outlaw Rockers. Remove the remains of any broken clips, and discard. **CAUTION:** Careful not to damage painted surfaces while prying with Panel Tool, apply masking tape to the areas if necessary.




6. Remove Aero Deflector from stock Rocker. Remove the T-27 screws and "J" Clips (will be installed on your Outlaw Rocker).






## CD4II3DM

7. Measure and cut the bottom section of the factory Rockers. From the rear of the Rocker measure 11" and mark a line. From the front, measure 2-1/2" and mark a line. From the inside edge, measure 2.5" and mark a line. Cut the part out using a jigsaw or similar.

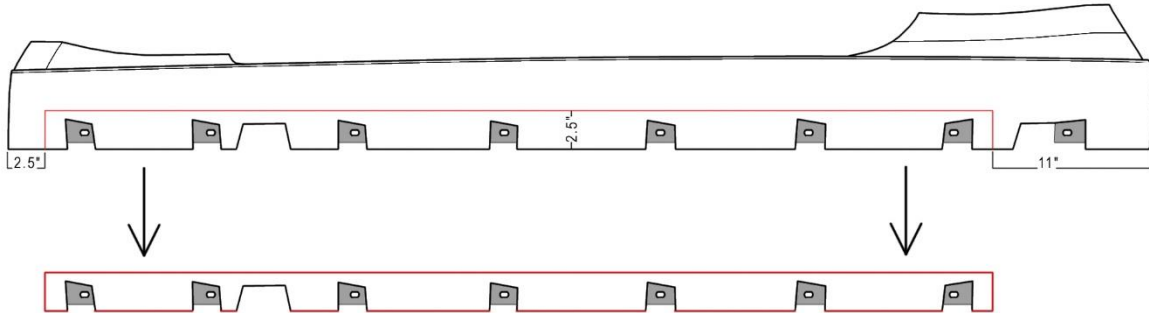


**CLASSIC**  
DESIGN CONCEPTS  
**OUTLAW**  
**ROCKER**  
**TRIM**

8. Remove Upper bracket from Factory Rocker. Use panel tool to separate Bracket from Rocker, this should come apart easily.

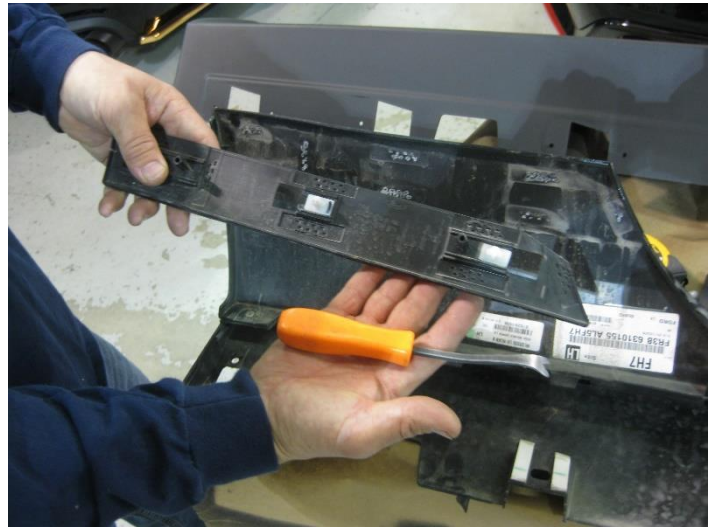

## CD4II3DM

- Attach lower portion of stock Rocker to your CDC Outlaw Rocker. Align the part with the openings on the Outlaw Rocker and hold to the edge of the Rocker. Use spring clamps or similar to temporarily hold in place.

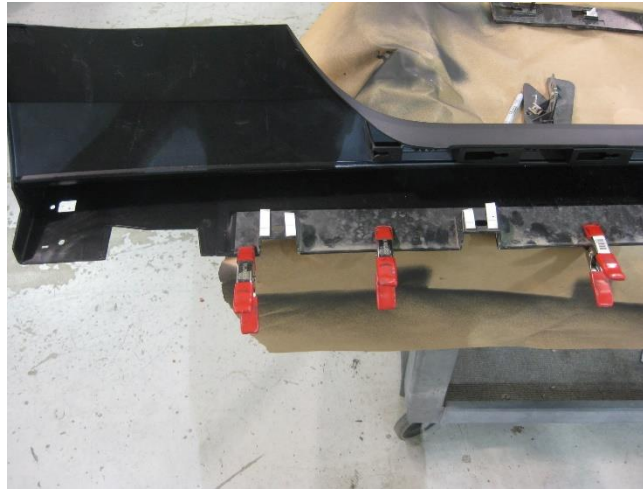

- Using the holes in the Outlaw Rockers as drill guides, drill 3/16" holes as shown and install the supplied 3/16" rivets.




- Trim the Deflector to fit the Outlaw Rocker, refer to picture below.



12. Install the Aero Deflector (removed from stock Rockers in step # 3) on the Outlaw Rockers. Install the "J" clips, and the T-27 screws.



13. Trim tab from bracket as shown in picture below.

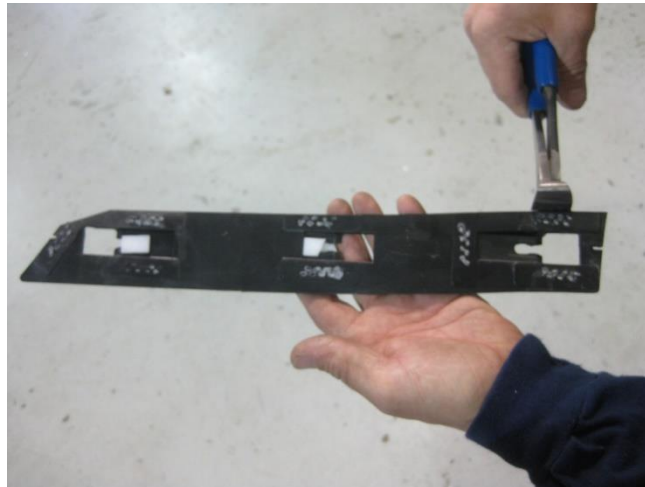


14. Clean the back side of the Outlaw Rockers, and the back side of the Bracket removed from factory rocker with the supplied Alcohol pack and allow to dry. Apply the supplied Adhesion Promoter to the same areas and allow to dry.






CD4II3DM


15. Apply the supplied 3M VHB tape to the back side of the Bracket as shown in picture below, cut to length with a razor blade.

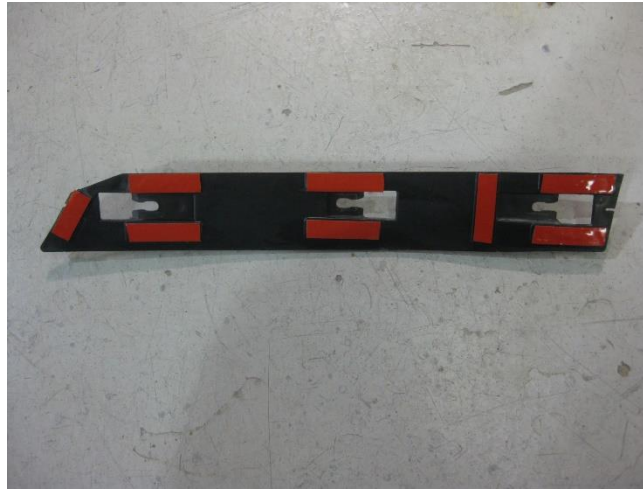

16. Remove the red backing from the 3M tape and install the bracket as shown below. **NOTICE:** There are molded alignment tabs on the Outlaw Rocker to aid the assembly. Press Bracket firmly to activate the pressure sensitive adhesive of the 3M tape.

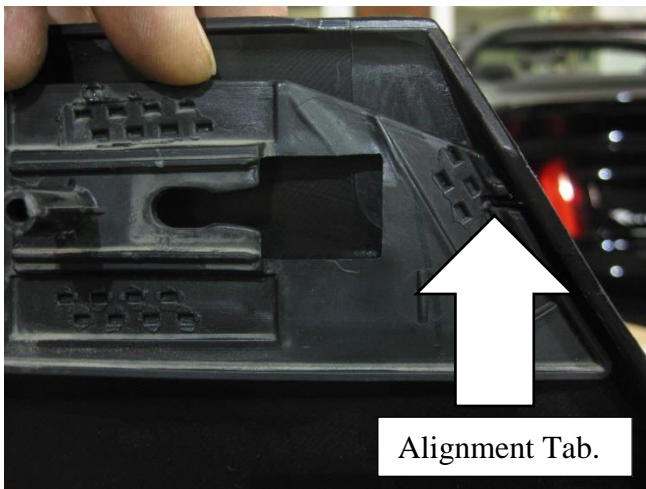

17. Install the replacement Rocker Clips in all locations.

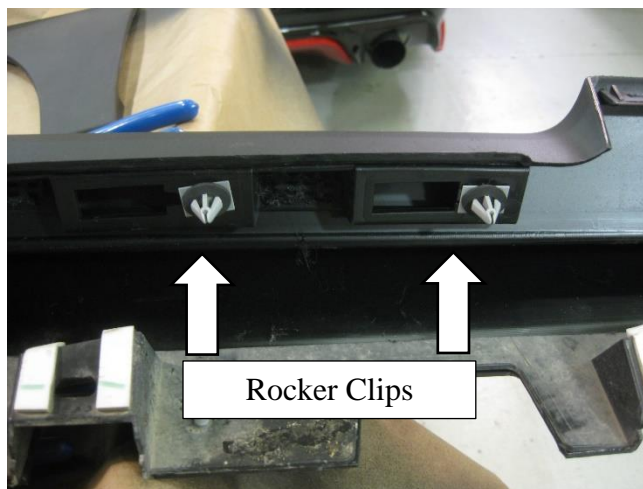



## CD4II3DM

18. Install the Outlaw Rockers. Starting at the front, align the Rocker Clips and snap into place. Reinstall the Push Pin fasteners in the wheel openings and the underside.



Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation, please contact [Tech@CDCdetroit.com](mailto:Tech@CDCdetroit.com) or call 866-624-7997.