


# Installation Instructions – JMS PedalMAX Kit P/N PX-5000-1114F Ford Drive-By-Wire Electronic Throttle Enhancement Device

#### Included in the PedalMAX kit:

- (1) PedalMAX assembly
- (1) 4-pin RED de-sensitizing throttle plug
- (2) Cable ties
- (1) Small Screwdriver

Please read the complete installation instructions before attempting to install this product. PedalMAX will increase the torque and responsiveness of the OEM drive-by-wire throttle assembly. The PedalMAX unit is designed to be mounted inside the vehicle cabin, under the dash near the accelerator pedal position sensor. PedalMAX should not come into direct or prolonged contact with water or extreme engine heat (+250F).

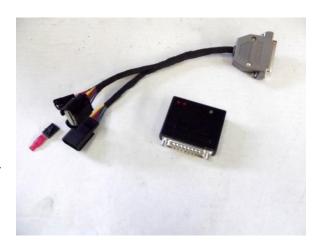

**Connect the Assembly:** Attach the black PedalMAX device to the wiring harness.

Plug it into the 25-pin connector and secure it with the two small screws. Use the supplied screwdriver.



**Important:** Disconnect the negative terminal of the battery before installing this product. If you do not disconnect the battery the factory computer will not learn the correct starting pedal position.


**Step 1:** Locate the pedal position sensor assembly. It is located on the top of the accelerator pedal.





**Step 2:** Unplug the wiring harness from the pedal position sensor.


**Note:** To separate the connector from the sensor: slide back the red locking tab on the harness connector and then press the black tab down to remove the connector.

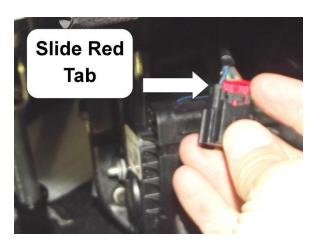

**Step 3:** Plug the PedalMAX device in-line between the pedal position sensor and OE wiring harness by connecting the male and female PedalMAX connectors to the Original Factory connector and sensor.



**Step 4:** Secure the PedalMAX unit using the (2) supplied cable ties. The device should not be hanging loosely or unsecured. Do not attach or mount to any moving assemblies such as the steering column.

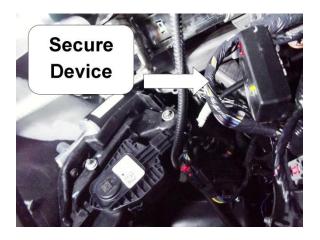




**Step 5:** Test the device – Once the device is installed and secured, insert the ignition key, and start the vehicle. Let the vehicle idle, and look at the device to make sure the green LED is illuminated, which alerts you that the device is active and functioning.



**Step 6:** Test drive the vehicle – Drive the vehicle under normal conditions. You should notice a significant improvement in throttle responsiveness and acceleration.

**RED Plug:** The PedalMAX device is pre-configured to provide the maximum increase in throttle response. If this amount of increase is too aggressive for your driving style, you can connect the supplied 4-pin RED de-sensitizing plug into the 4-pin connector on the device. The RED de-sensitizing plug will decrease the amount of increased throttle response to about 60% of the maximum setting for a less-aggressive response.

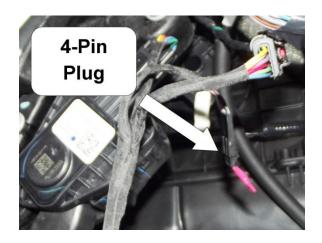

### **Notes and Troubleshooting:**

- Check Engine Light If you experience a check engine light and have no pedal response
  after starting the vehicle immediately following installation, and the green LED is
  illuminated, turn the key back to the off position, remove the ignition key and restart the
  vehicle after waiting 45 seconds. If you have a key fob: make sure that the vehicle is off
  and that the dash lights are off for at least 45 seconds. When you restart the car this
  should eliminate the check engine light and restore the pedal response.
- No LED's (Unit does not function) Re-Check the connectors at the pedal position sensor and verify that the green LED is illuminated when the vehicle is powered on or running.
- Red Plug The PedalMAX device is pre-configured to provide a increase in throttle response. If this amount of increase is too aggressive for your application, you can connect the optional RED PLUG to decrease the throttle response.



**Optional Control Accessory:** The optional single pedal knob (P/N BX-6999-SINGLE) is designed to plug in to the 4-pin connector and over-ride the pre-configured throttle response settings. With this option, you have ultimate control over the sensitivity with a range of 0% increase to the 100% maximum increase, based on the position of the control knob.



## **Using PedalMAX in-line with BoostMAX:**

PedalMAX and BoostMAX have been pre-engineered to work together for additional performance enhancement on Ford Ecoboost engines. In this scenario, PedalMAX will be installed in-line between the BoostMAX device and the pedal position sensor. The installation process is the same as noted above, except the PedalMAX harness will connect to the BoostMAX output connector and the pedal position sensor. Using PedalMAX in conjunction with BoostMAX will appear to add some lowend horsepower and torque, along with the increase in throttle responsiveness.



#### PX-5000-1114F Supports the Following Vehicles:

- 2011-2015 Ford F-150
- 2011-2015 Ford F-250
- 2011-2015 Ford F-350
- 2011-2015 Ford F-450
- 2011-2015 Ford F-550
- 2011-2015 Ford Mustang
- 2011-2015 Ford Focus
- 2011-2015 Ford Fusion
- 2011-2015 Ford Taurus
- 2011-2015 Ford Edge
- 2011-2015 Ford Escape
- 2011-2015 Ford Flex
- 2011-2015 Ford Explorer
- 2011-2015 Ford Expedition
- 2011-2015 Ford Transit
- 2012-2015 Ford C-Max
- 2012-2015 Ford B-Max

- 2010-2015 Ford S-Max
- 2010-2013 Ford Flex
- 2011-2015 Lincoln MKC
- 2011-2015 Lincoln MKX
- 2011-2015 Lincoln MKZ
- 2011-2015 Lincoln MKS
- 2011-2015 Lincoln MKT
- 2011-2015 Lincoln Navigator
- 2010-2015 Volvo S60
- 2010-2015 Volvo V60
- 2010-2015 Volvo S80
- 2012-2015 Volvo V40
- 2010-2015 Volvo V70
- 2013-2015 Jaguar XF
- 2013-2015 Jaguar XJ
- 2011-2015 Range Rover Evoque
- 2011-2015 Land Rover Freelander