


ROUSH


THE ART OF PERFORMANCE ENGINEERING

SECTION B: MUSTANG

1. On the passenger side of the vehicle, remove the oil fill cap & undo the PCV valve hose by pushing the retaining clip to the side with a flat blade screwdriver or your finger.

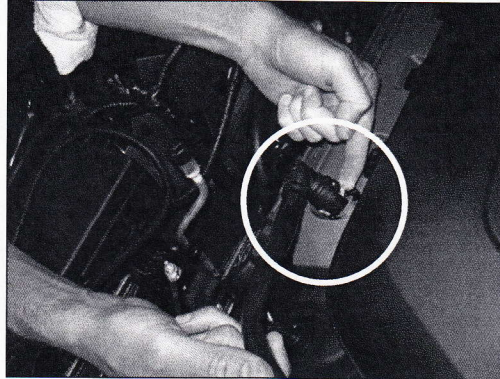

2. Remove the factory Ford coil cover by pulling up on it.

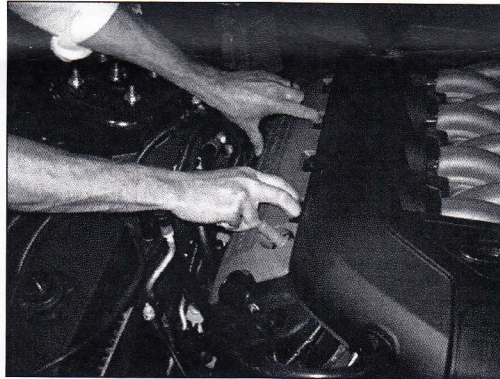


3. Install the RH side POWERED BY FORD or ROUSH coil cover by placing it over the ball studs on the cam cover & pushing down firmly to seat.



ROUSH

THE ART OF PERFORMANCE ENGINEERING

4. Re-install the oil fill cap & connect the PCV hose.
5. On the driver's side of the vehicle, remove the PCV closure hose from the cam cover fitting by pushing the retaining clip to the side with a flat blade screwdriver or your finger.

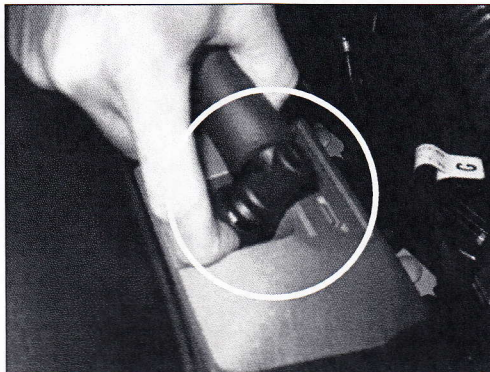


6. Remove the factory Ford coil cover by pulling up on it.



ROUSH

THE ART OF PERFORMANCE ENGINEERING

7. Install the LH side POWERED BY FORD or ROUSH coil cover by placing it over the ball studs on the cam cover & pushing down firmly to seat.

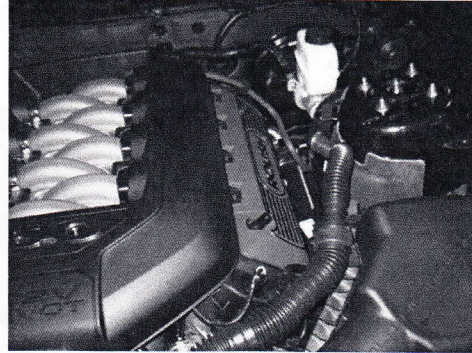

8. Re-connect the PCV closure hose.

Congratulations!!! You have completed the installation of the ROUSH Coil Cover Kit. It is recommended that you save all parts removed from your vehicle during the installation of this kit.

For an online demonstration of this installation check out the following link:

http://youtu.be/nqxAZ_Zq0Qs?hd=1