



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, CA. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-70694
 2015-2016 FORD MUSTANG
 V6 3.7L/ECOBOOST/V8 5.0L
 REAR WING
 3 PIECE SET URETHANE

INSTALLATION INSTRUCTIONS

NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.

NOTE:

Check fit all body parts PRIOR to paint. Follow urethane prep instructions before painting. Take your time and pre-fit all pieces so that they will have a tight fit to the body.


VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST					
1	Rear Wing	1	Instruction Sheet	12 FT	1/2" Two Sided Tape # 75344
1	Urethane Prep Sheet			5PKGS	3M Adhesion Promoter

TOOL LIST
NONE REQUIRED

1. Remove any other wings if so installed.
2. Set the Street Scene center rear wing in place to see where the two sided tape will go. You will need to clean both the vehicle and the new wing with 3M promoter so that the tape will stick good.
3. Do the same procedure to the left and right side of the wing. Clean with the 3M promoter. Below is a photo where the two sided tape goes on the center wing and corners.

TAPE LINE ON CENTER WING

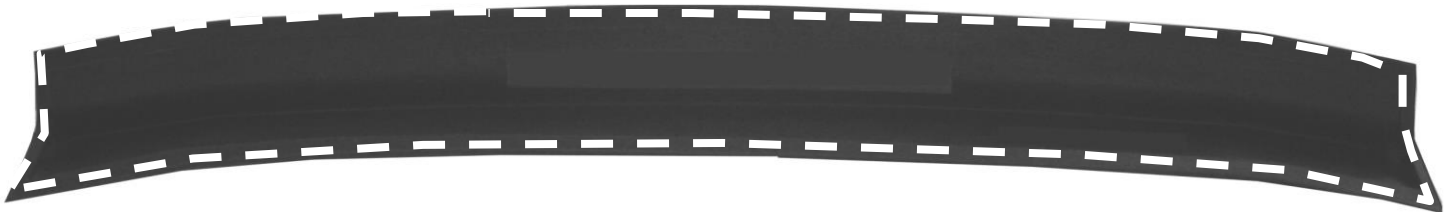

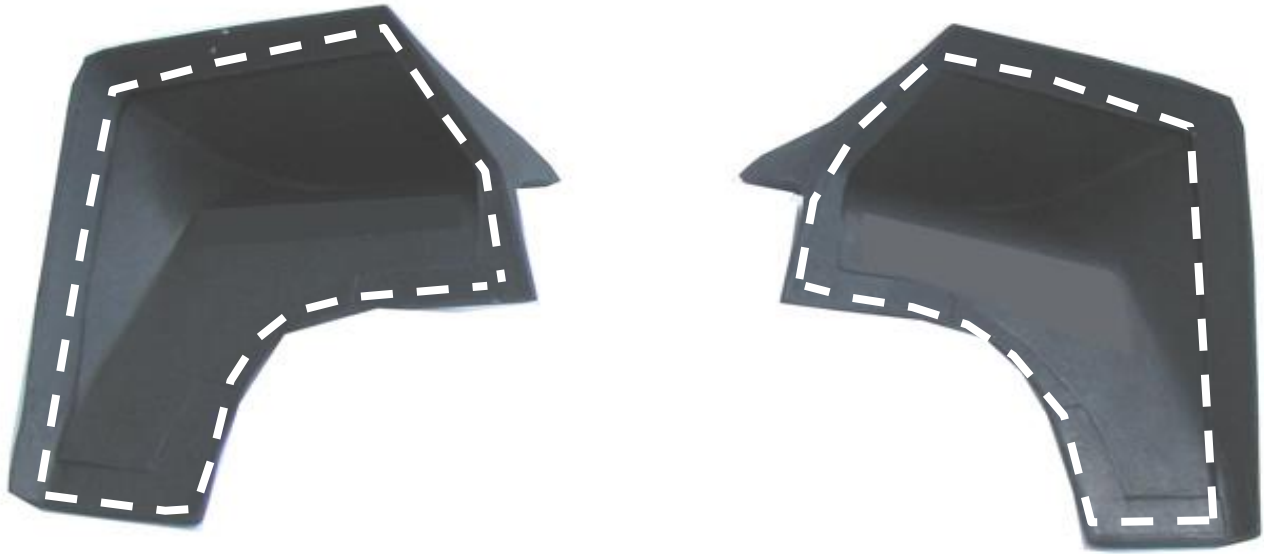TAPE LINE ON CORNERS LEFT & RIGHT

4. Lift the corners of the tape backing on the ends. Do not pull all off at this time.
6. Set wing onto the deck lid where it will be installed. Grab the corner of the tape backing and pull. Apply pressure to the wing. Do the same on all pieces.

